


HOME DECORATORS C O L L E C T I O N

BF-25034 PROVENCE HAMPER 33H×28.5W×13D

INV#11132






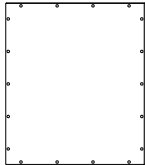






ASSEMBLY INSTRUCTIONS

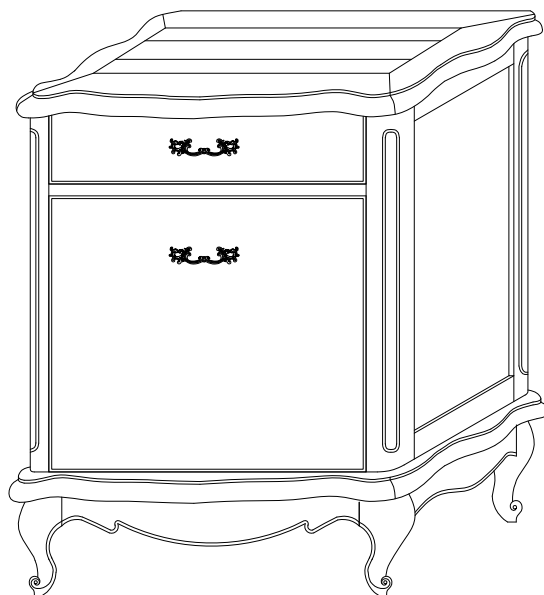
Made In China




Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.


PARTS LIST		
A  TOP PANEL-1PC	B  BOTTOM PANEL-1PC	C  LEFT SIDE PANEL-1PC
D  RIGHT SIDE PANEL-1PC	E  ACROSS PANEL-1PC	F  BACK PANEL-1PC
G  LEGS-4PCS	H  DRAWER PANEL FRONT-1PC	I  DRAWER PANEL BACK-1PC
J  LEFT DRAWER PANEL SIDE-1PC	K  RIGHT DRAWER PANEL SIDE-1PC	L  DRAWER PANEL BOTTOM-1PC

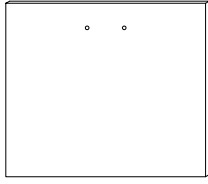M

(BUCKET) FRONT PANEL-1PC

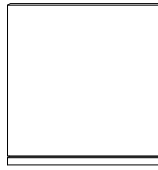N


(BUCKET) BACK PANEL-1PC

O(BUCKET)
LEFT SIDE PANEL-1PC**P**(BUCKET)
RIGHT SIDE PANEL-1PC**Q**

(BUCKET) BOTTOM PANEL-1PC

R

CAM-LOCKS-8PCS

S

CAM-BOLTS-8PCS

T

CAM-TOOL-1PC

U

HANDLES-2PCS

V

7mm × 5/8"



SCREWS-18PCS

W


8mm × 5/8"




SCREWS-4PCS

X

13mm × 1-3/4"




SCREWS-8PCS

Y


ALLEN WRENCH-1PC

Z


6mm × 1"




SCREWS-20PCS

A1


WASHERS-8PCS

B1

FEET-4PCS


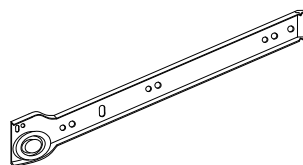








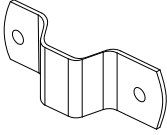

C1

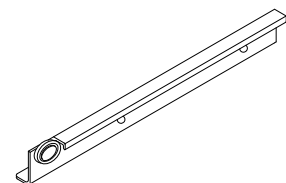LEFT OUTER SLIDE-1PC

D1


LEFT INNER SLIDE-1PC

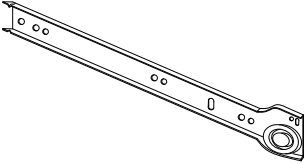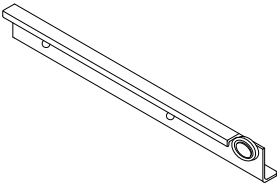NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

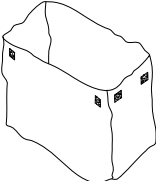E1  RIGHT OUTER SLIDER-1PC	F1  RIGHT INNER SLIDE-1PC	G1 6mm × 3/8"  SCREWS-14PCS
H1 11mm × 1-1/2"  SCREWS-4PCS	I1  HINGES-2PCS	J1  BAG-1PC
K1  ALLEN WRENCH-1PC	L1 7mm × 7/8"  SCREWS-4PCS	M1  GECKOS-4PCS
N1 6mm × 3/4"  SCREWS-4PCS	O1  HOOKS-4PCS	P1  PLASTIC BELTS-2PCS


NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

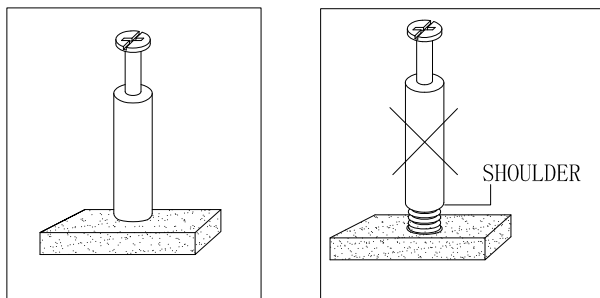


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

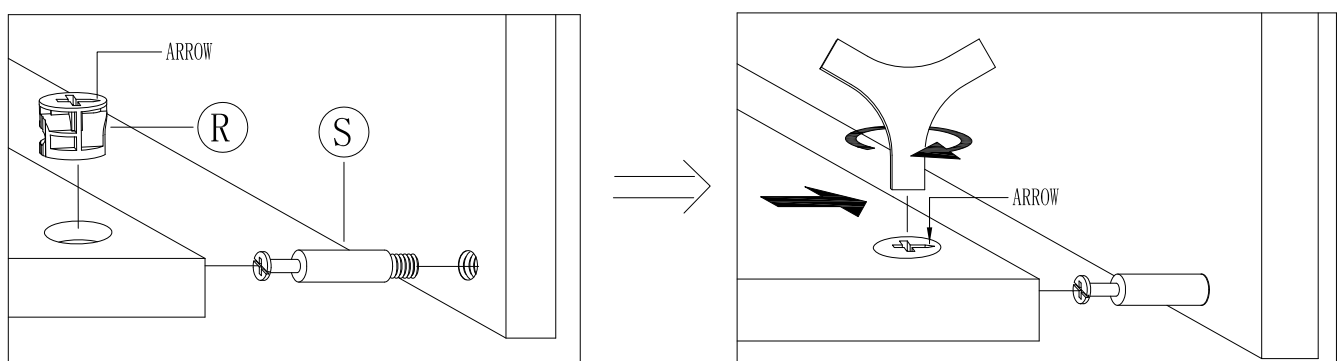


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

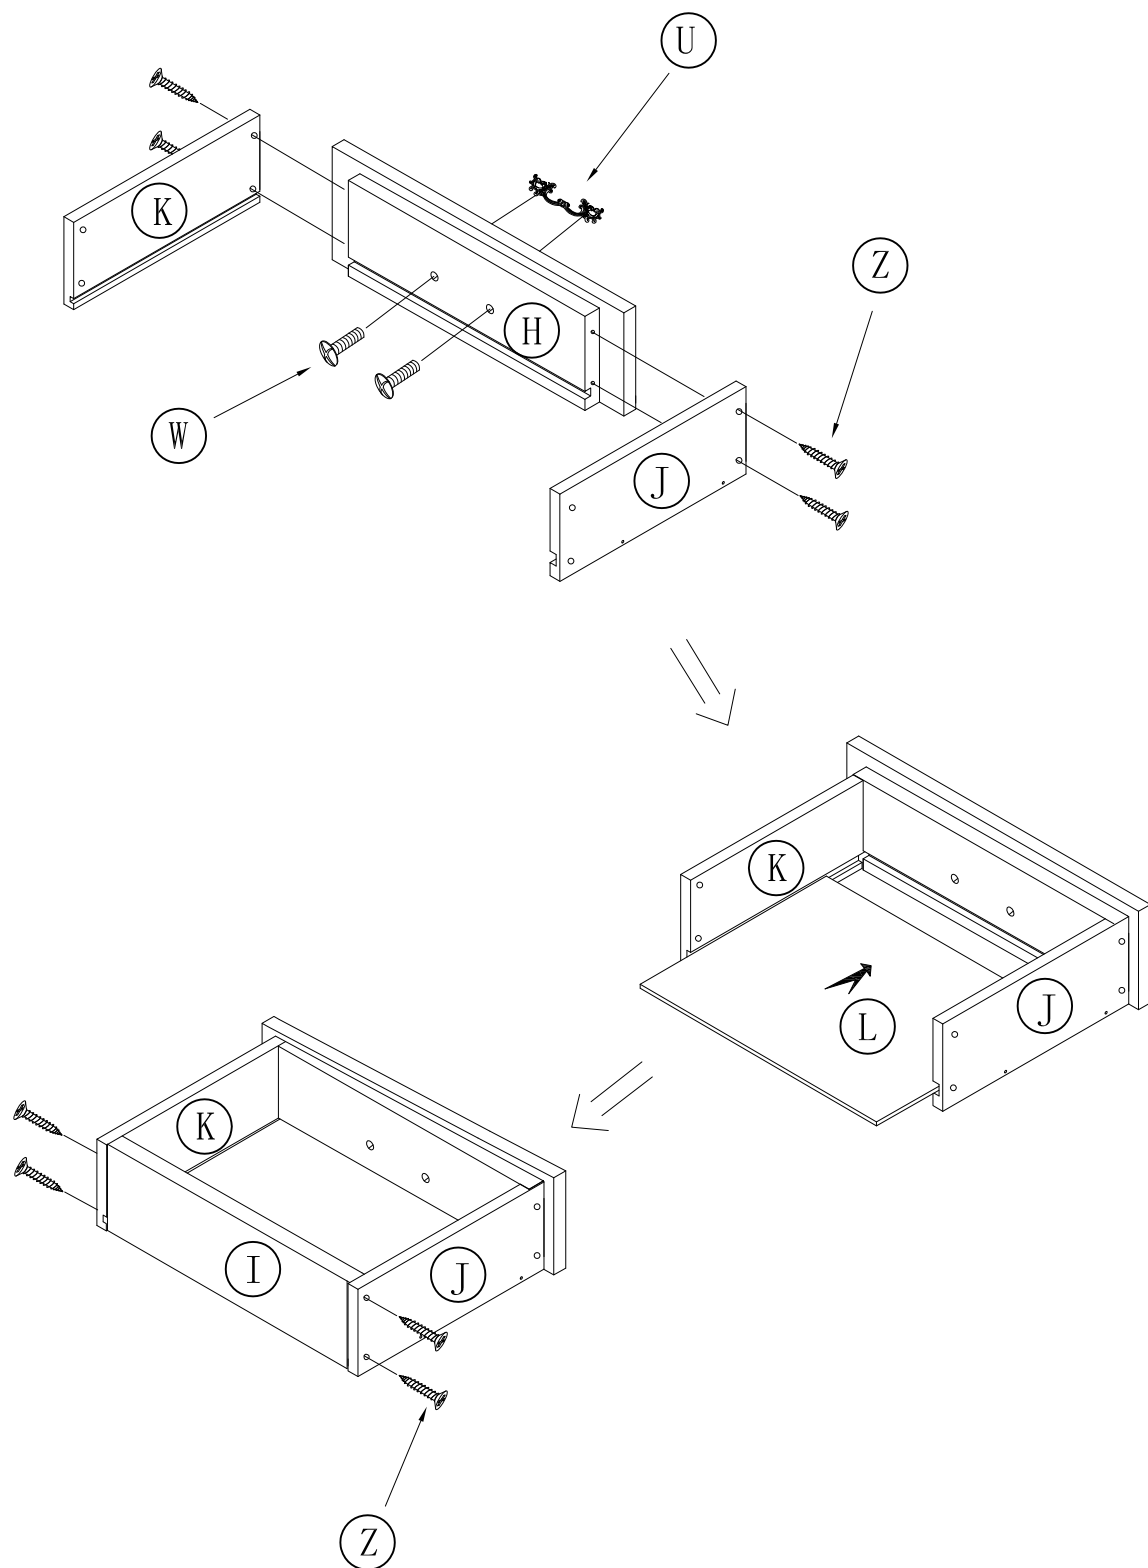


1). ASSEMBLE THE DRAWER.

- ATTACH DRAWER PANEL SIDE(J/K) TO DRAWER PANEL FRONT(H) USING 4 SCREWS(Z).
- ATTACH THE HANDLE(U) TO DRAWER PANEL FRONT(H) USING 2 SCREWS(W).
- INSERT THE DRAWER PANEL BOTTOM(L) INTO THE SLOTS IN THE DRAWER PANEL SIDES(J/K).
- ATTACH DRAWER PANEL BACK(I) BETWEEN LEFT DRAWER PANEL SIDE(J) AND RIGHT DRAWER PANEL SIDE(K) USING 4 SCREWS(Z).

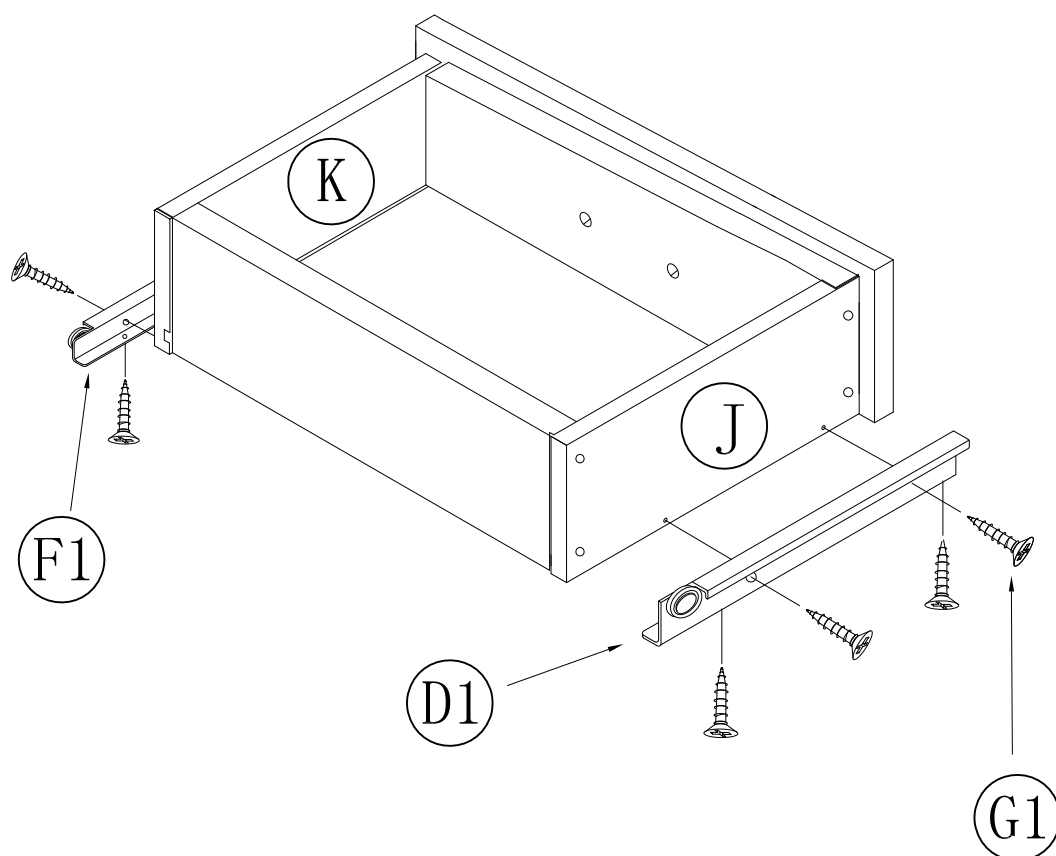


2). ASSEMBLE THE INNER SLIDE (D1/F1).

- ATTACH THE INNER SLIDE (D1/F1) TO DRAWER PANEL SIDE (J/K) USING 8 SCREWS (G1).

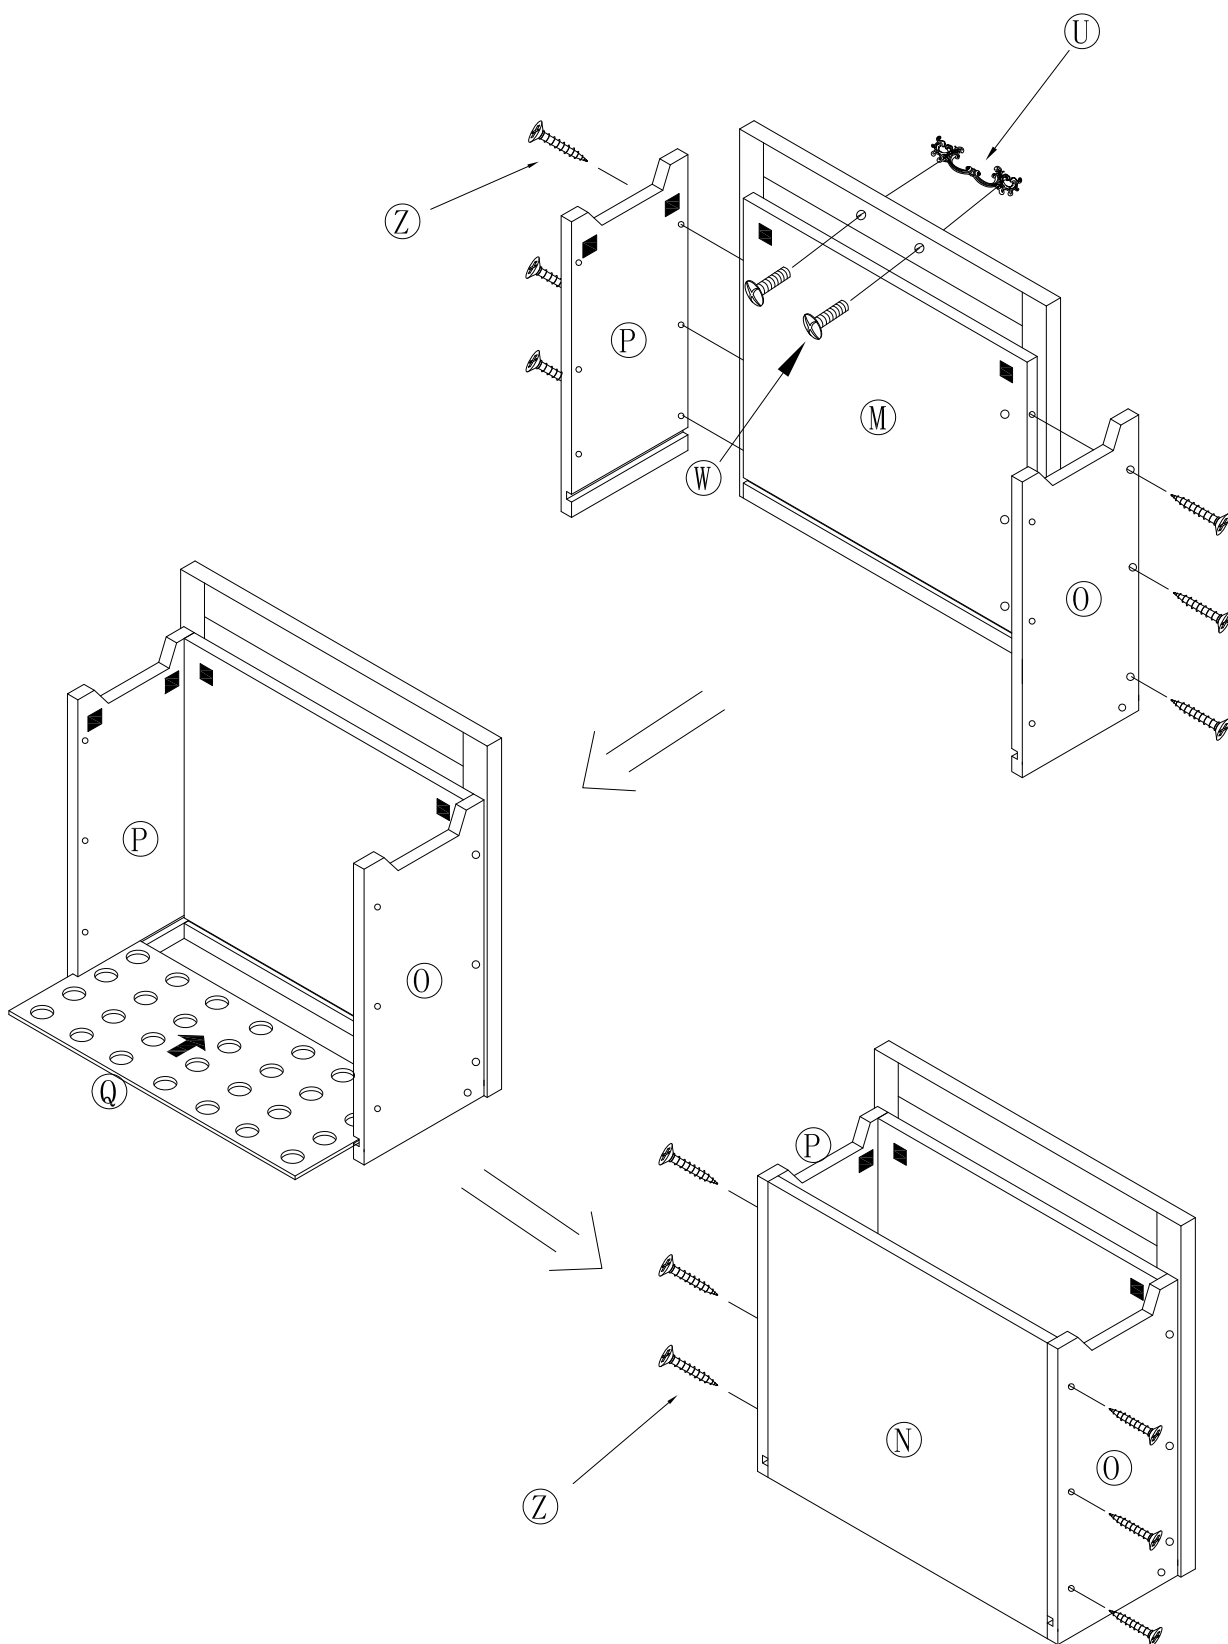


3). ASSEMBLE THE BUCKET.

- ATTACH SIDE PANEL(O/P) TO FRONT PANEL(M) USING 6 SCREWS(Z).
- ATTACH THE HANDLE(U) TO FRONT PANEL(M) USING 2 SCREWS(W).
- INSERT THE BOTTOM PANEL(Q) INTO THE SLOTS IN THE SIDE PANELS(O/P).
- ATTACH THE BACK PANEL(N) BETWEEN LEFT SIDE PANEL(O) AND RIGHT SIDE PANEL(P) USING 6 SCREWS(Z).

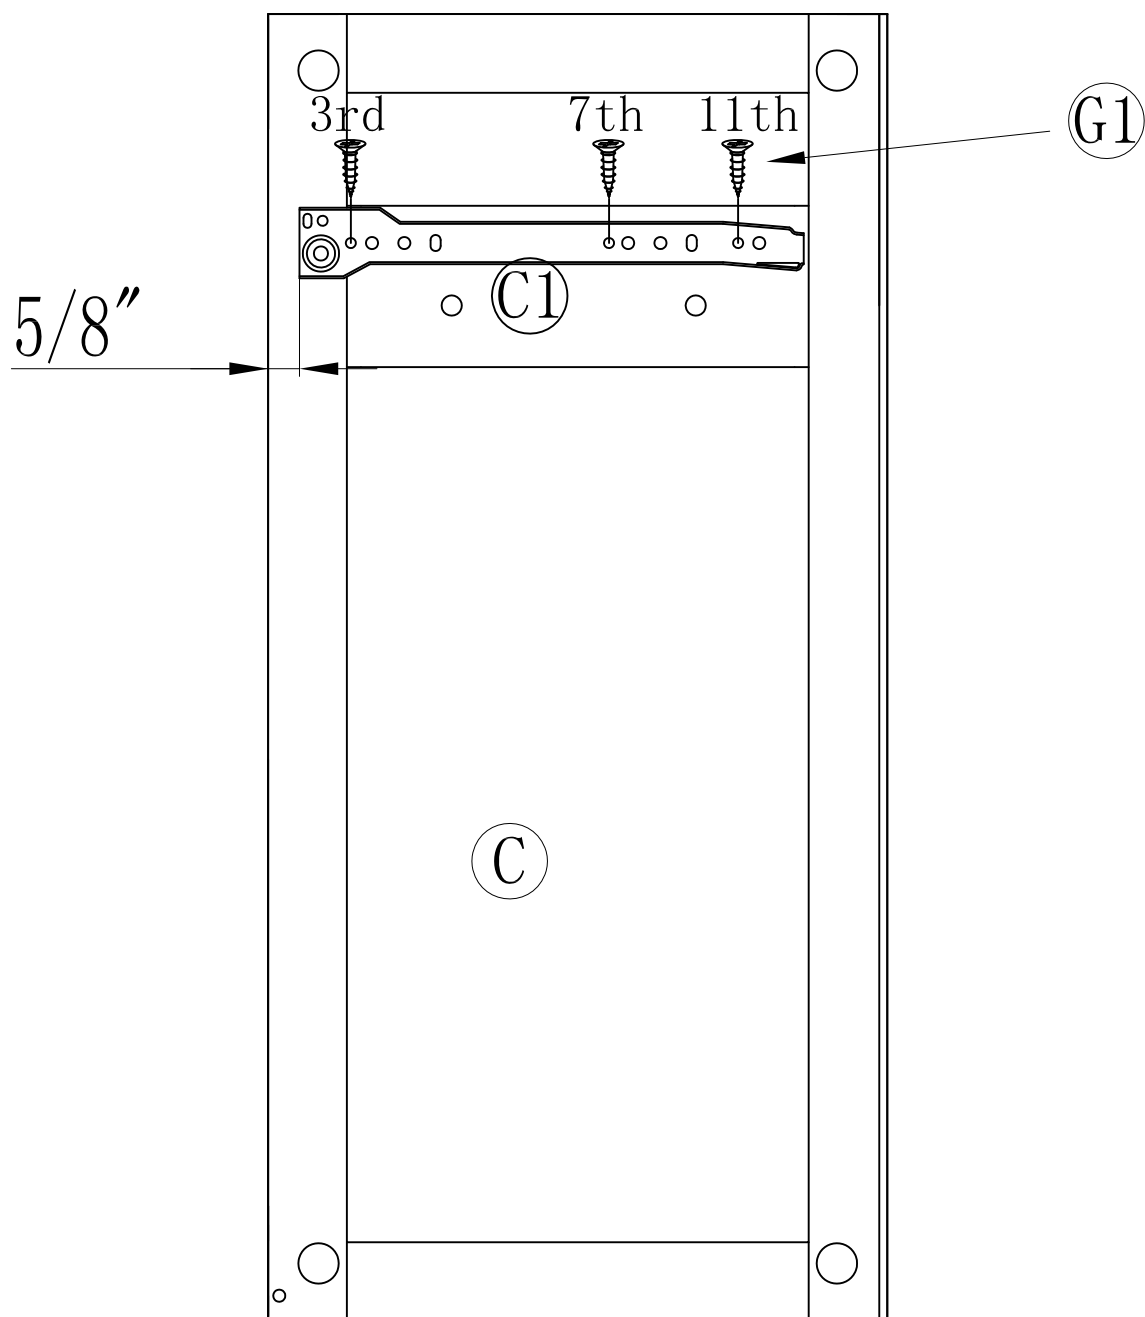


4). ASSEMBLE THE LEFT OUTER SLIDER(C1).

- ATTACH THE LEFT OUTER SLIDER(C1) TO LEFT SIDE PANEL(C) USING 3 SCREWS(G1).

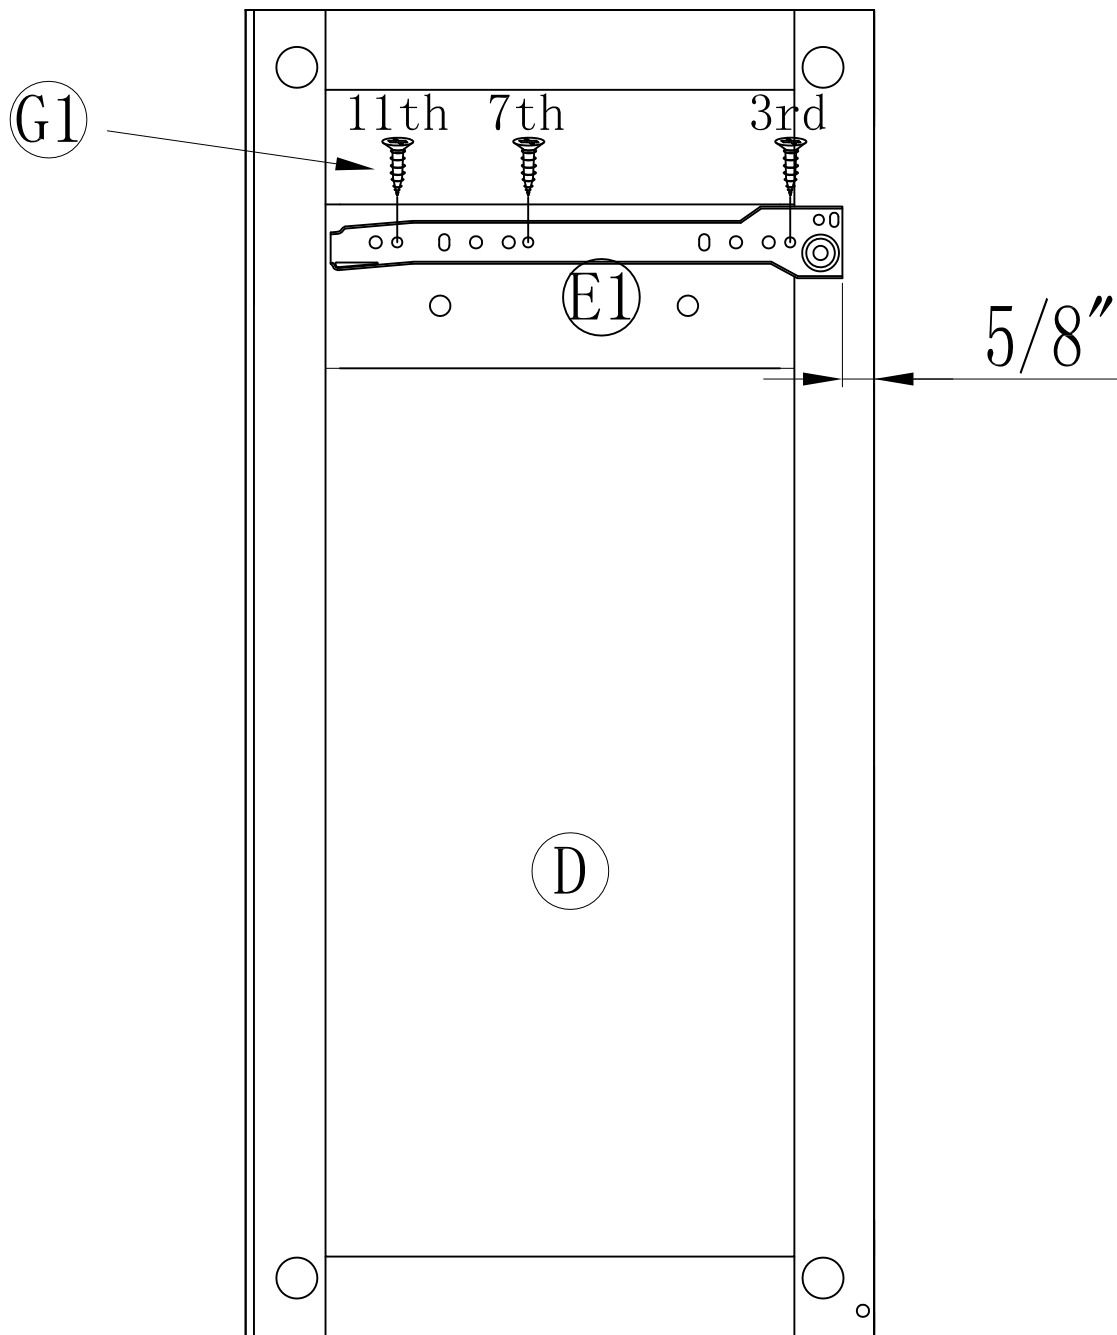


5). ASSEMBLE THE RIGHT OUTER SLIDER(E1).

- ATTACH THE RIGHT OUTER SLIDER(E1) TO RIGHT SIDE PANEL(D) USING 3 SCREWS(G1).

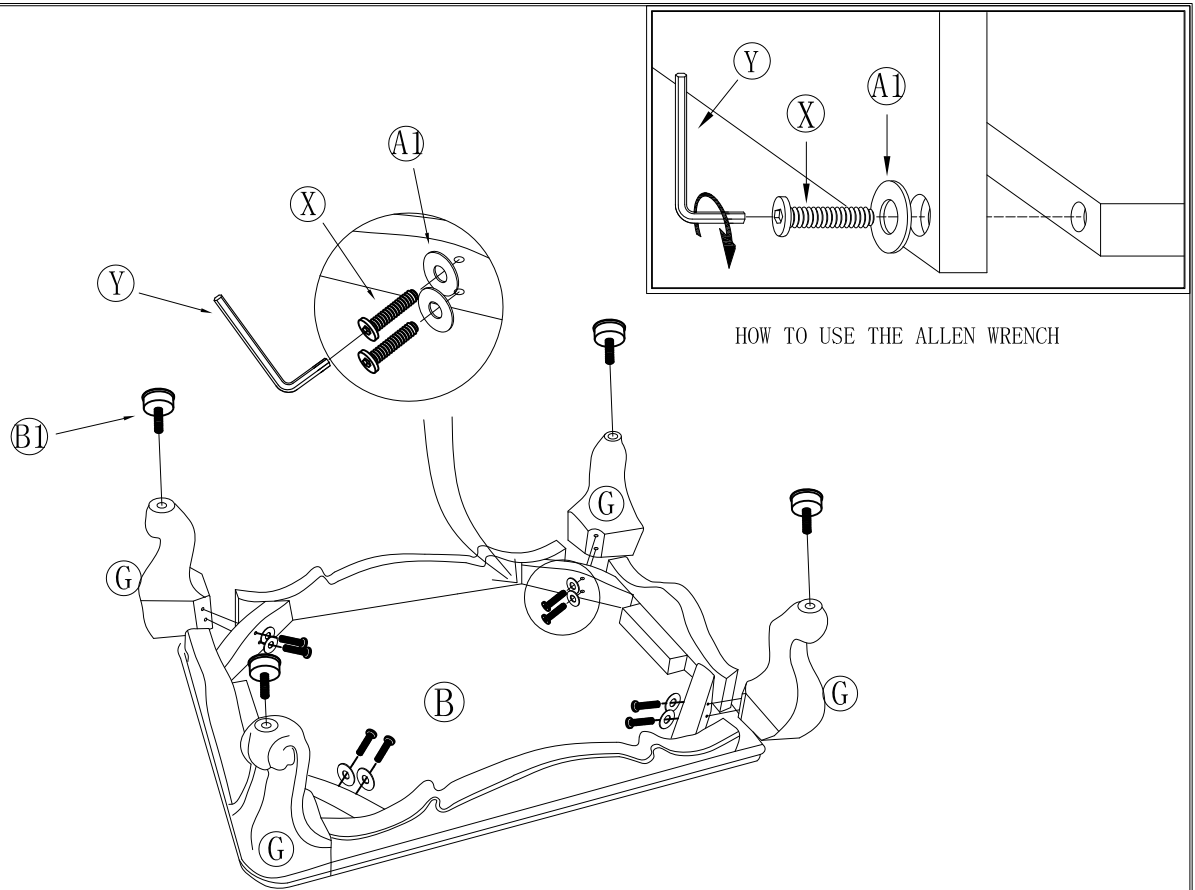


6). ASSEMBLE THE LEGS (G).

- ATTACH 4 LEGS (G) TO BOTTOM PANEL (B) USING 8 SCREWS (X) AND 8 WASHERS (A1).
- ROTATE 4 FEET (B1) INTO THE HOLES IN THE LEGS (G).

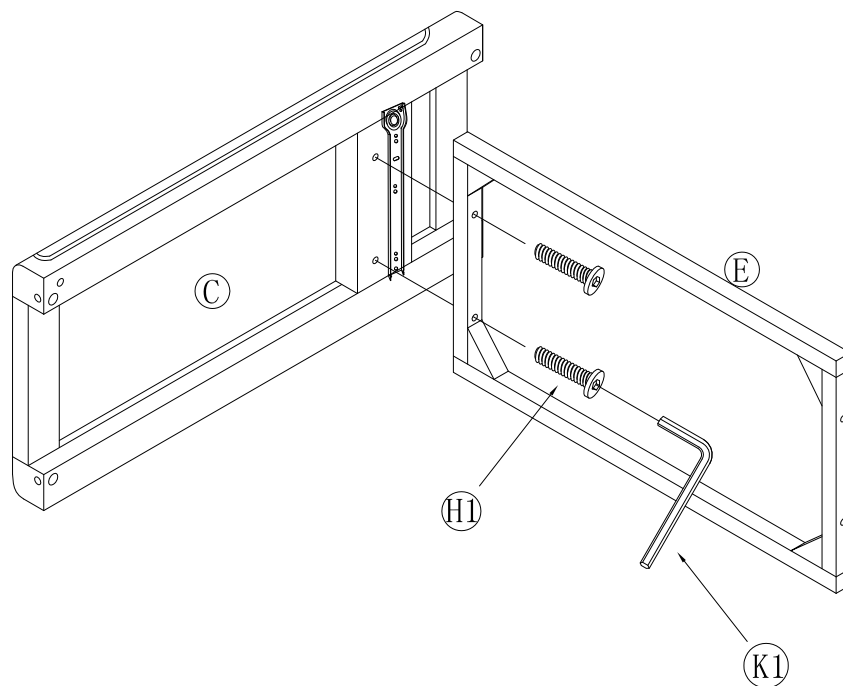


7). ASSEMBLE THE LEFT SIDE PANEL (C).

- ATTACH THE ACROSS PANEL (E) TO LEFT SIDE PANEL (C) USING 2 SCREWS (H1).

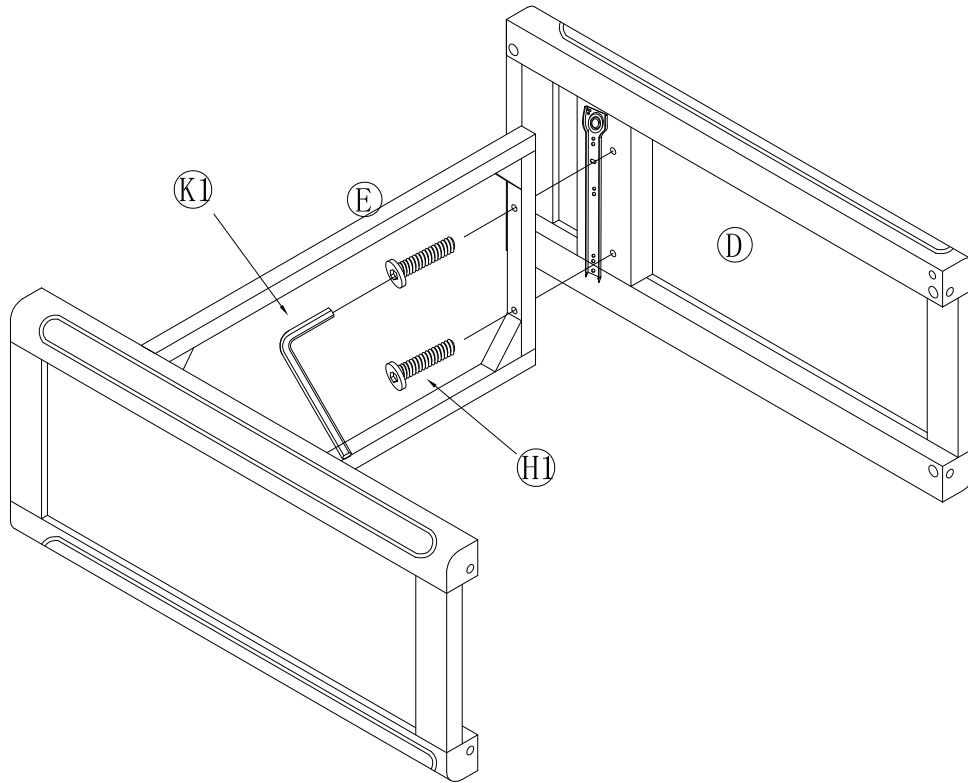


8). ASSEMBLE THE RIGHT SIDE PANEL(D).

- ATTACH THE ACROSS PANEL(E) TO RIGHT SIDE PANEL(D) USING 2 SCREWS(H1).

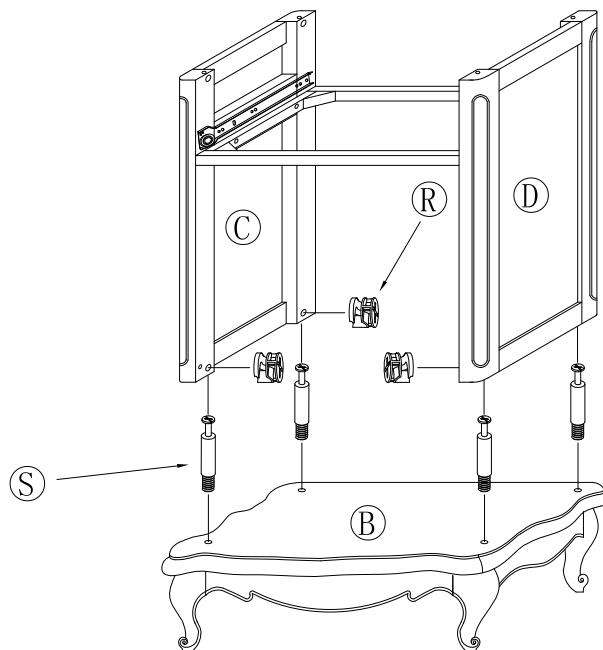


9). ASSEMBLE THE BOTTOM PANEL(B).

- ROTATE 4 CAM-BOLTS(S) INTO THE HOLES IN THE BOTTOM PANEL(B).
- PLACE CAM-BOLTS(S) INTO THE HOLES IN THE PANEL(C/D) AND ATTACH USING 4 CAM-LOCKS(R).

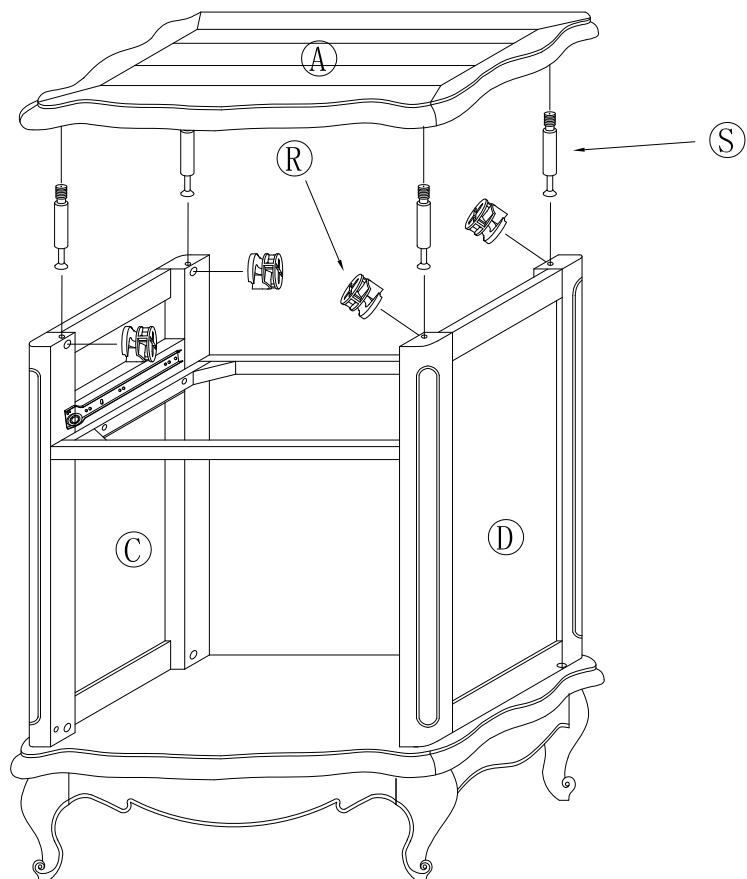


10). ASSEMBLE THE TOP PANEL (A).

- ROTATE 4 CAM-BOLTS (S) INTO THE HOLES IN THE TOP PANEL (A).
- PLACE CAM-BOLTS (S) INTO THE HOLES IN THE PANEL (C/D) AND ATTACH USING 4 CAM-LOCKS (R).

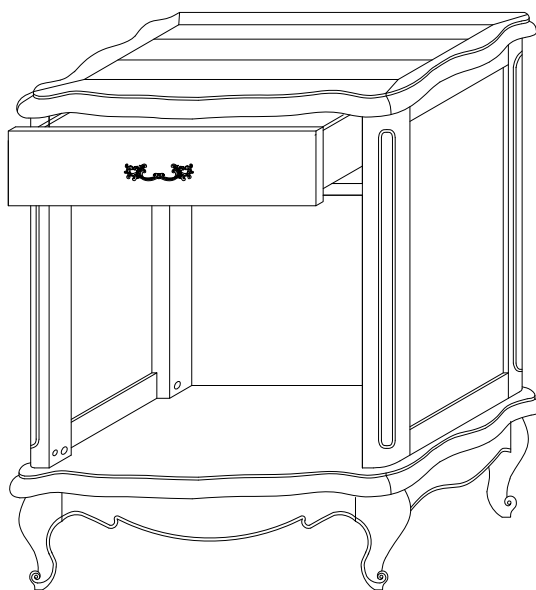

11). ASSEMBLE THE DRAWER.

- INSERT THE DRAWER INTO THE SLIDERS.

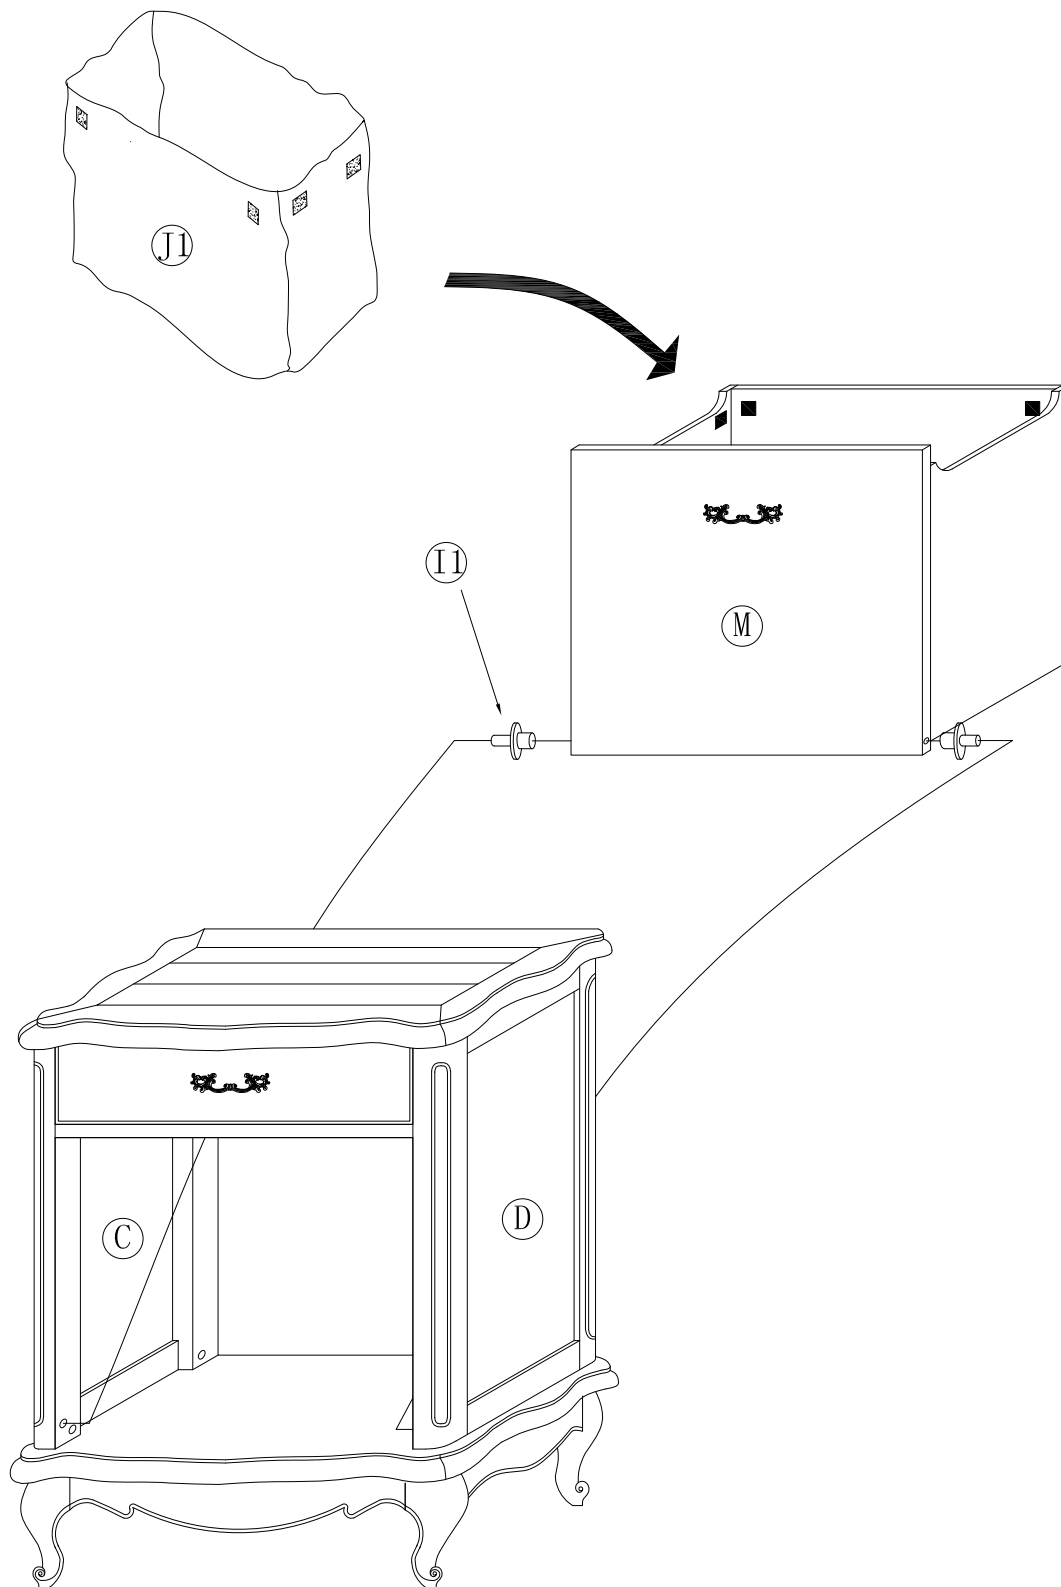


12). ASSEMBLE THE BUCKET.

- PUT THE BAG (J1) INTO THE BUCKET.
- INSERT THE HINGES (I1) INTO THE HOLES IN THE (BUCKET) FRONT PANEL (M).
- PLACE THE HINGES (I1) BETWEEN INTO THE HOLES IN THE SIDE PANEL (C/D).


Warning

The anti-tip hardware must be used as part of assembly!

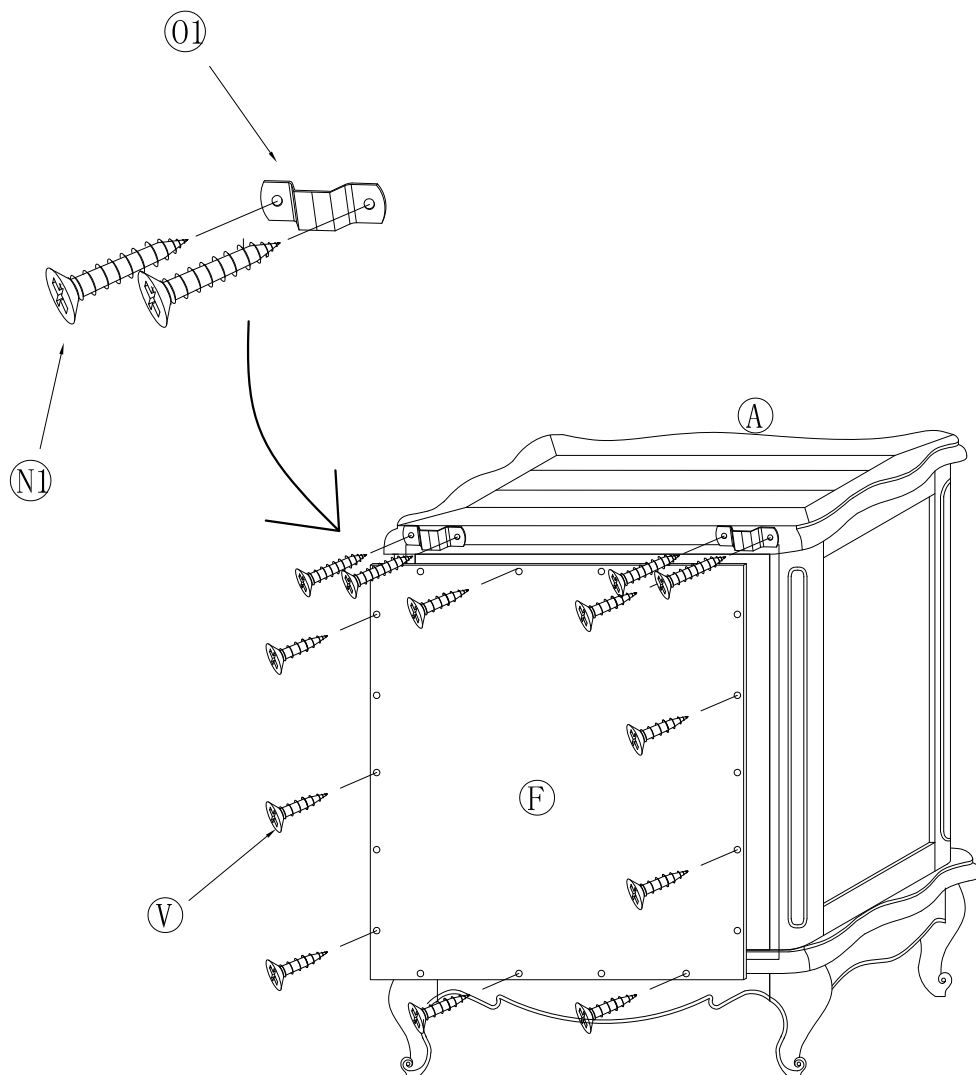

13). ASSEMBLE THE BACK PANEL (F).

- ATTACH THE BACK PANEL (F) USING 18 SCREWS (V).
- ATTACH 2 HOOKS (O1) USING 4 SCREWS (N1) IN THE PREDRILLED HOLES OF REAR TOP PANEL (A).

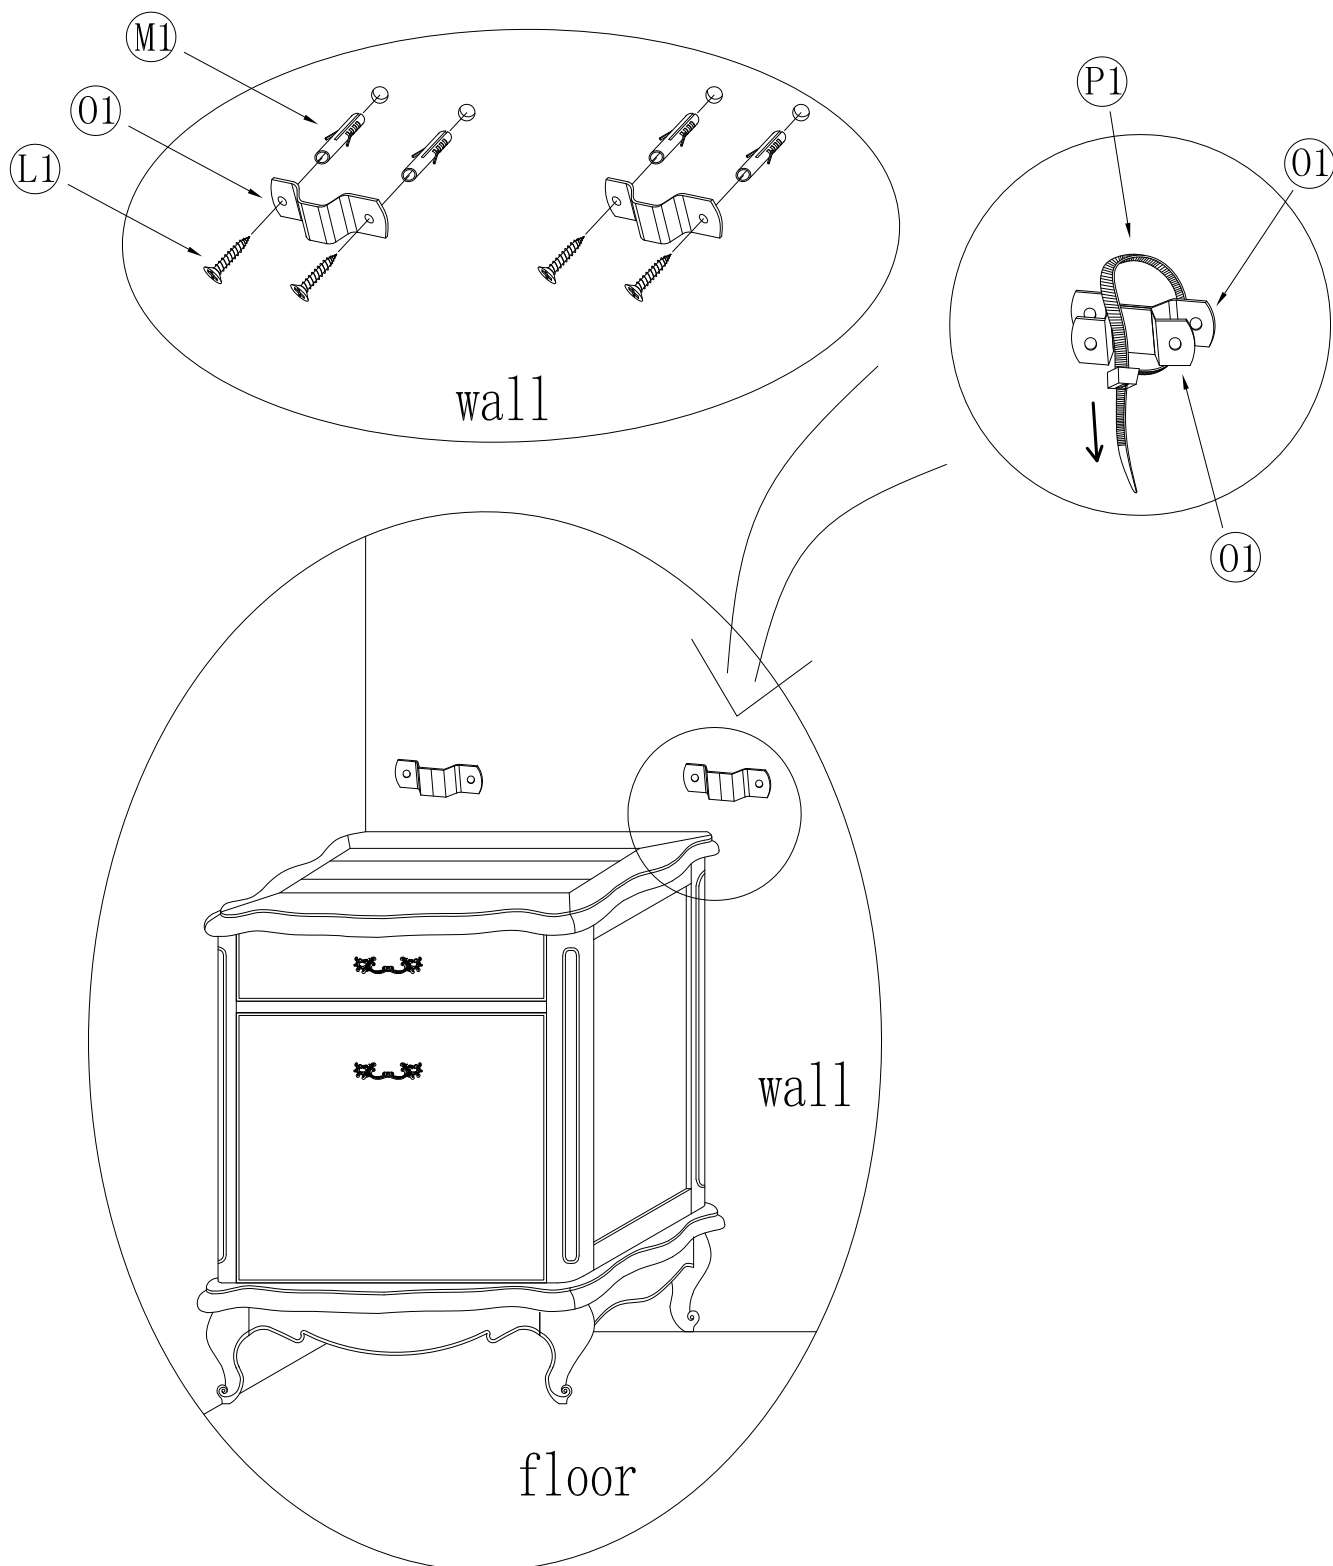

14). ASSEMBLE THE ANTI-TIP HARDWARE.

- DRILL 4 HOLES INTO WALL, PLEASE REFER TO THE REAR TOP PANEL'S HOLES DISTANCE AND HEIGHT.
- PUT 4 GECKOS (M1) INTO HOLES IN THE WALL, AND ROTATE 4 SCREWS (L1) INTO THE GECKOS (M1).
- CONNECT THE TWO HOOKS (01) WITH A PLASTIC BELT (P1).